





Step 1:
Remove base plate from its bag




Step 2:
Remove the aluminum extrusions from their bag

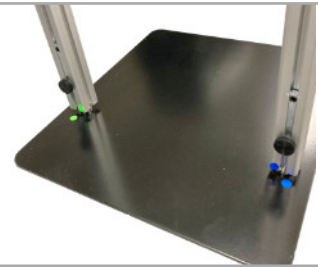


Step 3:
Place the the extrusions with blue and green stickers on the corresponding pegs on the base plate

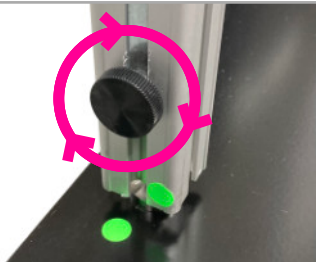


Step 4:
Tighten the thumbscrews

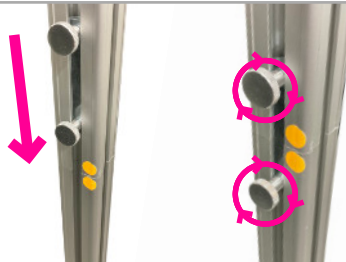

Step 5:
Place the upper extrusions, matching the colors. Slide the inserts to cover the seam. Tighten the thumbscrews.

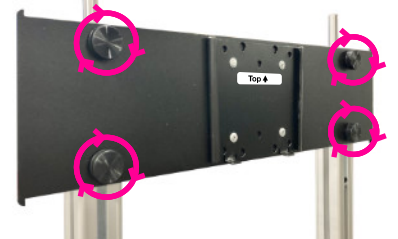

Step 6:
Attach the Top Plate using the 4 thumbscrews.

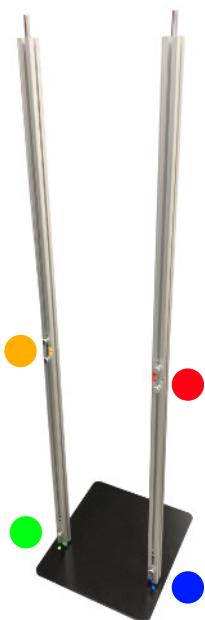

Rear View



Front View

