



TigerBrite Display – 64x64




Preparation: The drop cloth and cotton gloves (in your graphic/transformer bag) are included to help reduce dirt/grime on your graphic. We encourage use of the drop cloth, and the gloves can be substituted with a thorough hand-washing if desired.

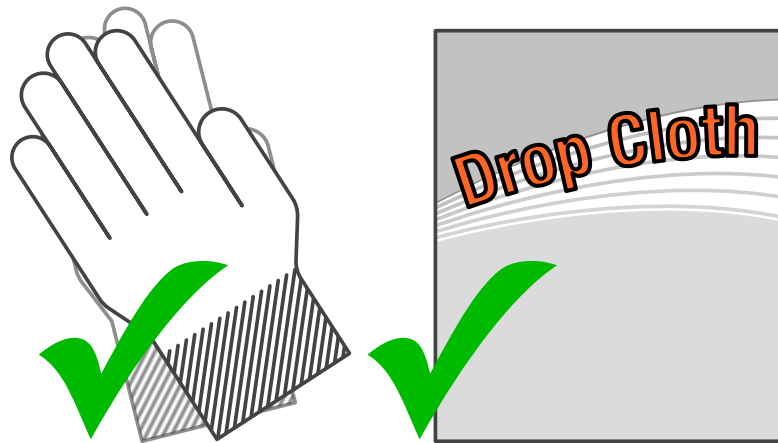


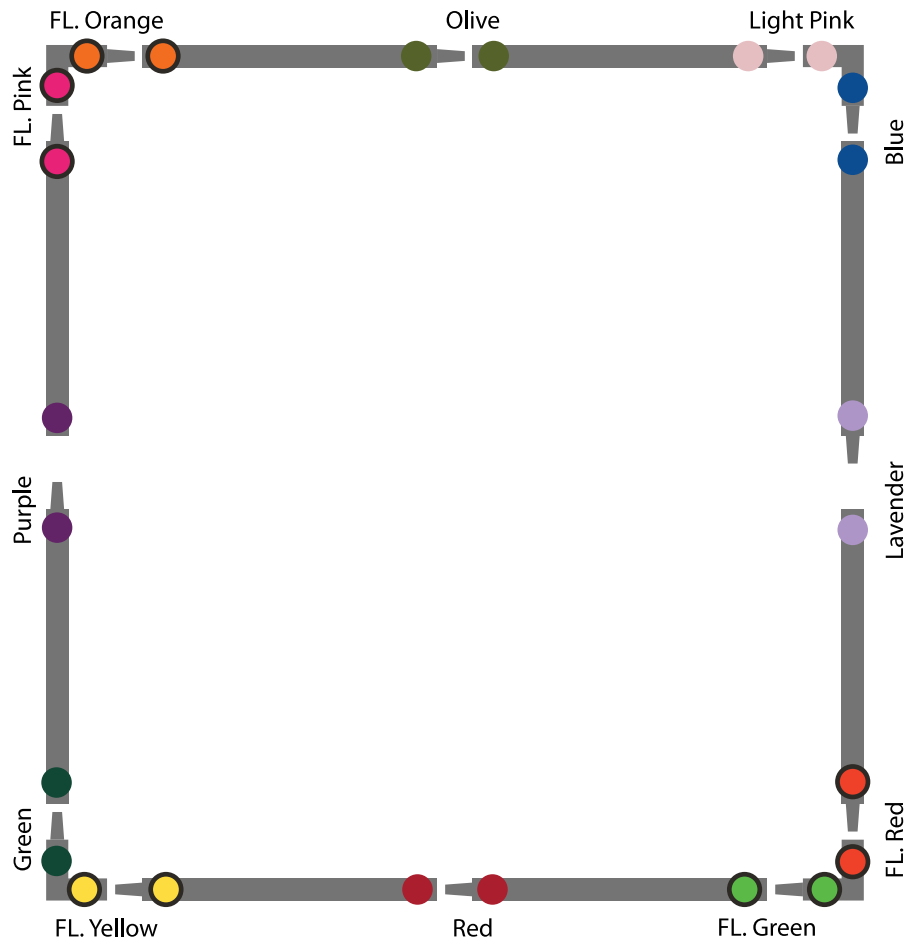

Step 1. Layout frame components per drawing

- Match colored dots to each other. Frame is labeled for top and bottom, and all labelling is on the BACK SIDE of the frame.
- Tube sections are keyed to fit in one orientation. Colored dots should align with each other, and parts will snap in place with magnets.

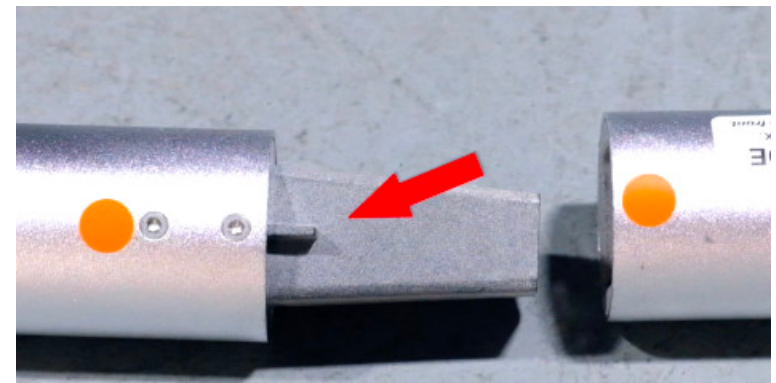


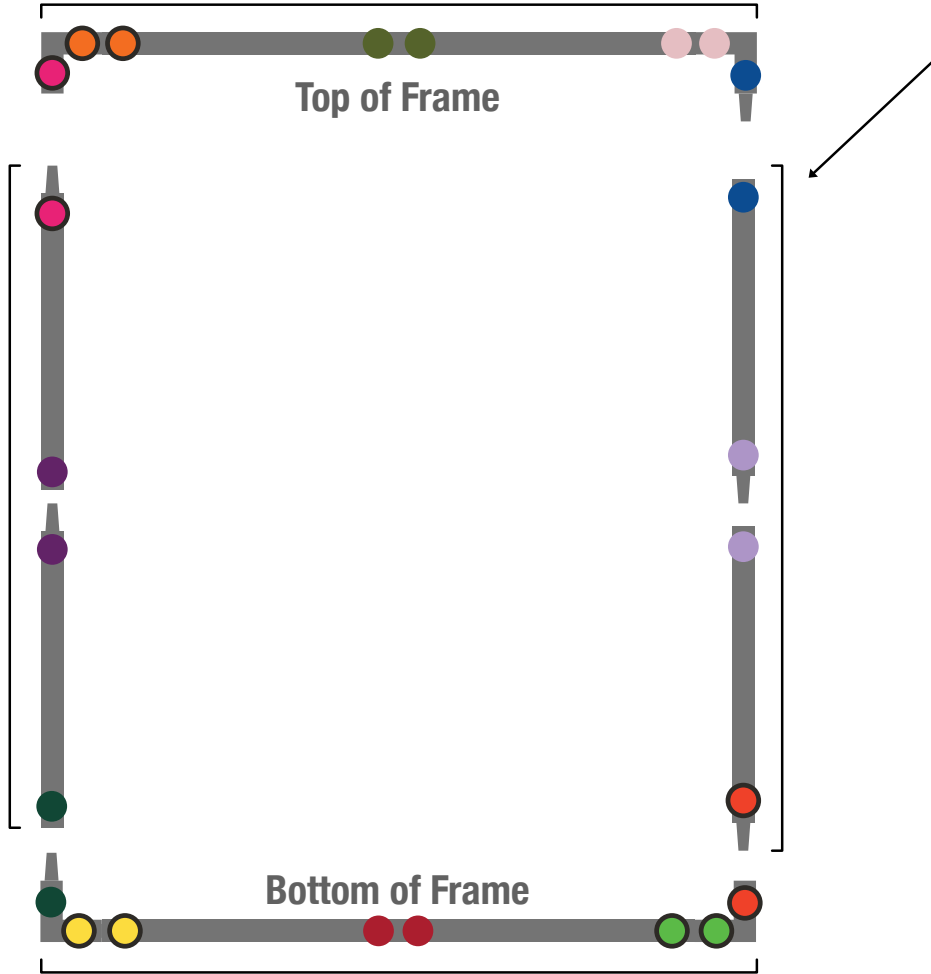


Step 2. Assemble sides and tops/bottoms separately


- Attach corner pieces to the top and bottom, not the sides

Step 3. Attach two sides to bottom of frame.

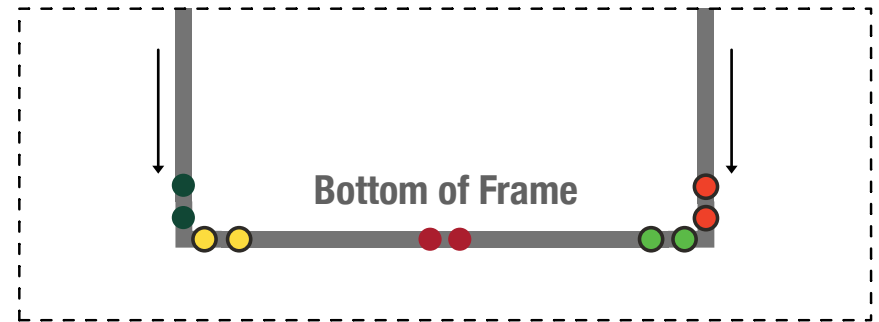

Step 4. Attach top of frame.

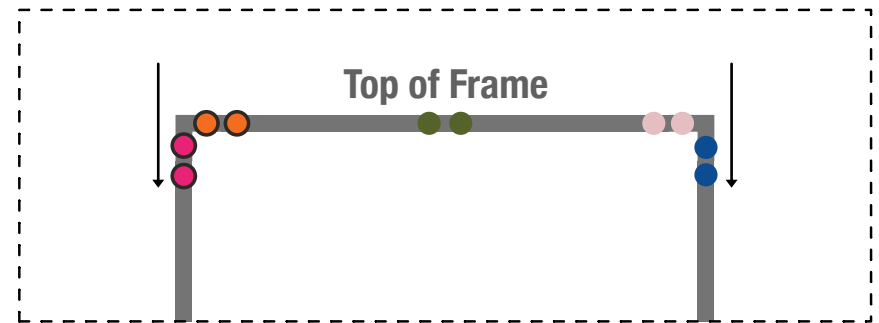

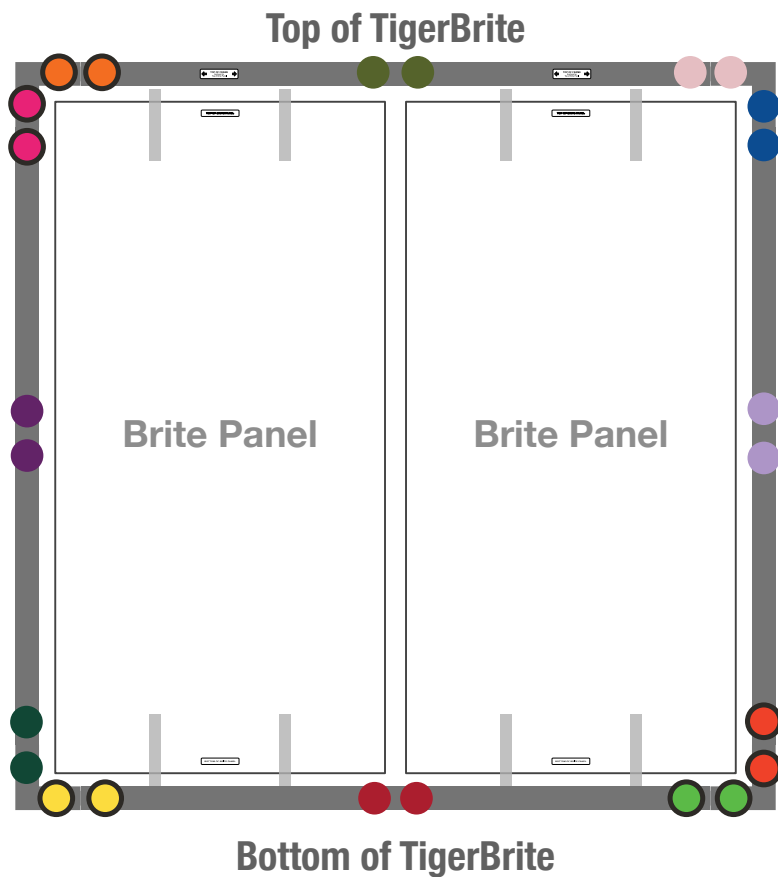

Step 5. With the frame still lying down, unroll the Brite Panels with the lights toward the floor.

- Top of Brite Panels should align with top of frame, and bottom with bottom
- Both the frame and the lights are facing toward the floor


Step 6. Velcro the Brite Panel to the frame using the straps and anchors

- Top of Brite Panel should be as close to the top of the frame as possible when strapped in.



Step 7. Stand the frame up, allowing the lights to stretch as far down as they can. **Re-cinch the bottom velcro straps for a snug fit if necessary.**

- If you have two people, this can be done by having one person hold the frame up and the other adjusting the straps. Otherwise, temporarily install the feet.

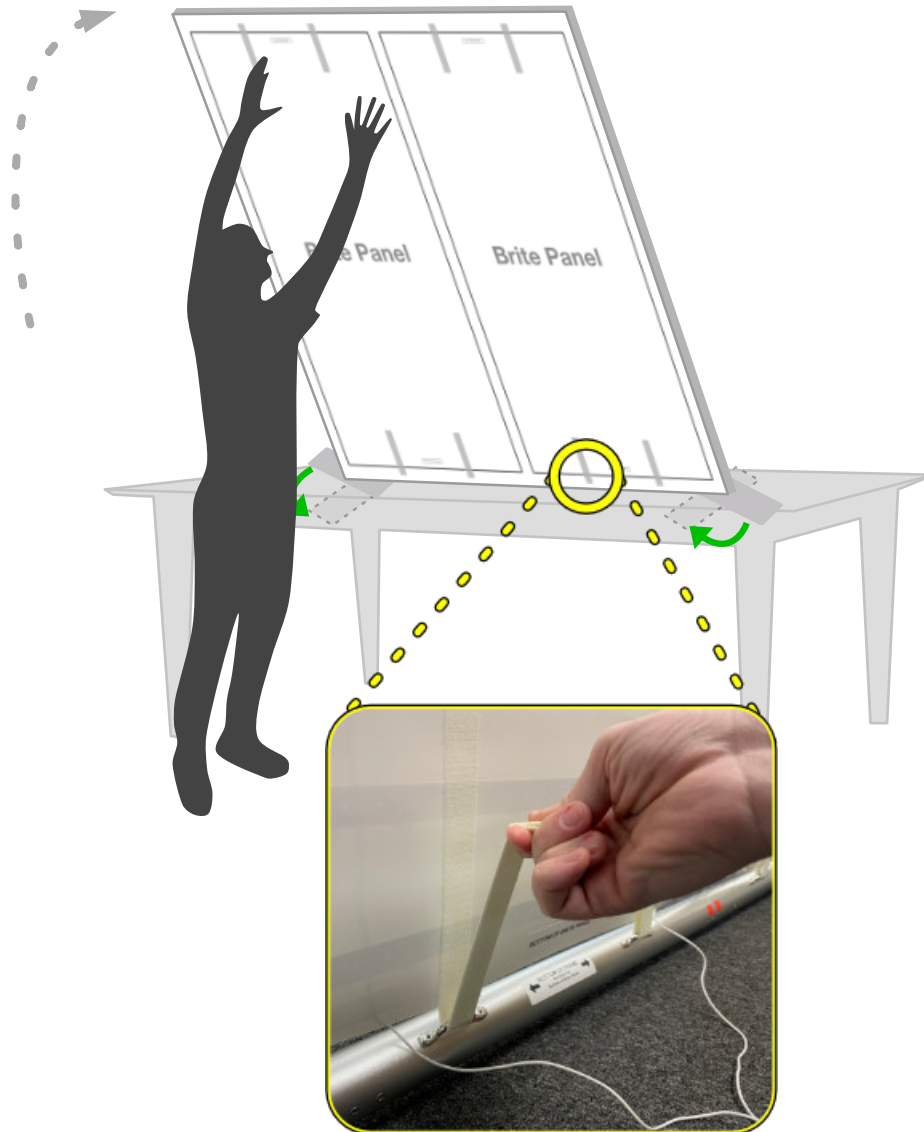


Step 7. Stand the frame up, allowing the lights to stretch as far down as they can.

Re-cinch the bottom velcro straps for a snug fit.

If you have two people, this can be done by having one person hold the frame up and the other adjusting the straps. Otherwise, temporarily install the feet.



**DO NOT PROCEED UNTIL YOU
HAVE COMPLETED STEP 7:
Re-Cinch Bottom Velcro Straps**

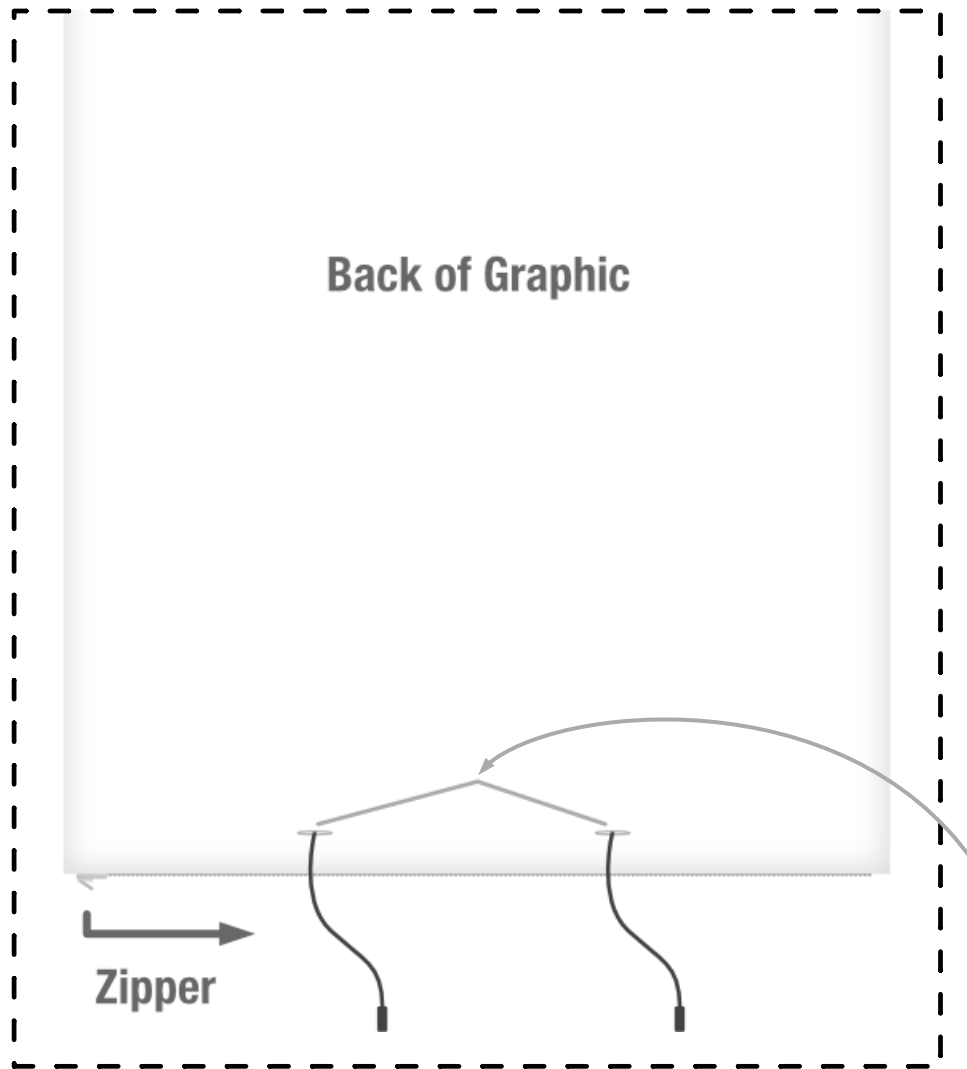

Step 8. Lie the frame back down on the ground, and begin sliding the pillowcase graphic on.

- Start by ensuring the graphic is entirely over the corners of the frame.
- Then slowly pull the graphic down the frame. You may find it easier to bunch and then smooth the graphic down the frame.




Step 9. Feed the power cables from the Brite Panels through the wire management holes in the white fabric back of the graphic.


Step 10. Zipper bottom of graphic.

Step 11. Install feet by inserting the metal pegs into the holes visible at the bottom of the frame.

- Shown here without the graphic.

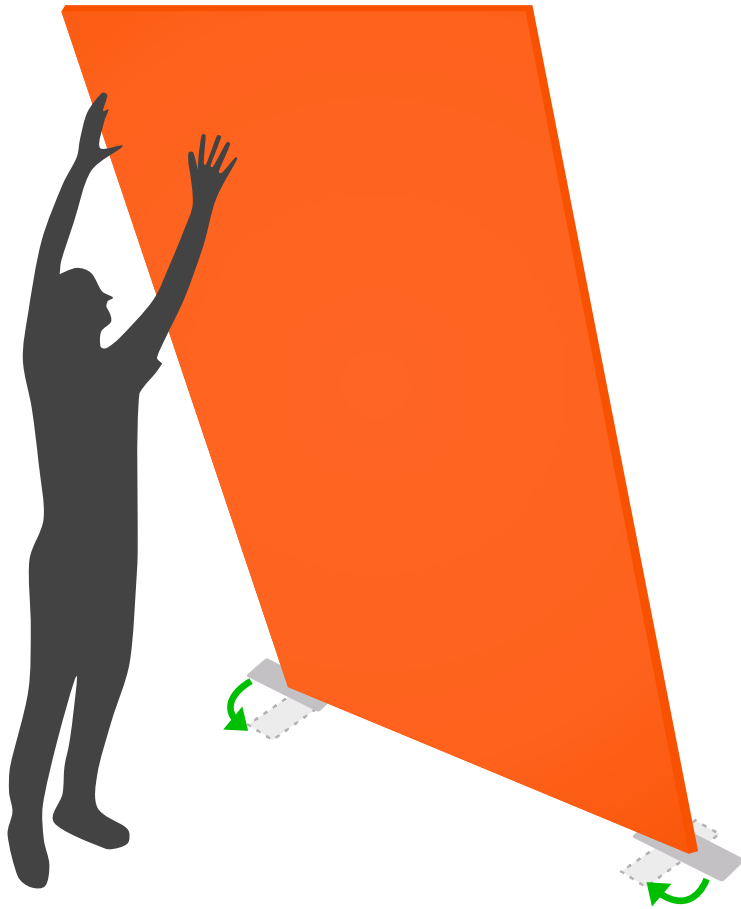


Step 12. Stand the display up and rotate feet into position

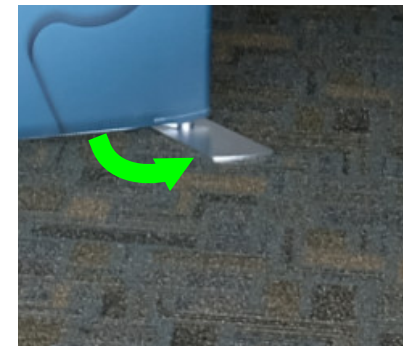



Step 13. Plug in transformer and connect transformer cables pulled through the graphic in step 9.

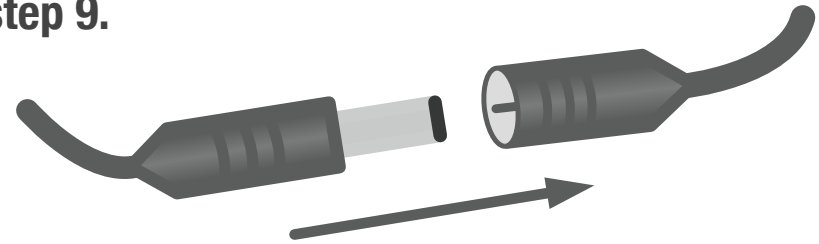

NOTE: Transformer has a fan for cooling, which must be left open to prevent overheating. Refer to "THIS SIDE UP" sticker to ensure correct orientation.

Repacking:

For maximum product lifespan, we recommend always packing in the included padded bags (as seen below).

